# 037N

**DENTAL CHAIR** 

INSTALLATION and OPERATION INSTRUCTIONS



#### TABLE OF CONTENTS

Page

E C
1. OVERALL VIEW AND MAJOR COMPONENTS1
2. DIMENSIONS AND SPECIFICATIONS2
3. ELECTRICAL DIAGGRAM
4. INSTALLATION PROCEDURES4
5. OPERATION PROCEDURES5
6. ADJUSTMENT OF POSITIONING8
7. CARE AND MAINTENANCE

## **Intended Use of the Product**

This product is intended for the exclusive use for diagnoses, treatments and relative procedures of dentistry, and must be operated or handled by the qualified dentists or by dental staffs under the supervision of the dentist. Such dentists or dental staffs should instruct and/or assist the patients to approach to and leave from the product. Patients should not be allowed to operate or handle the product unless he/she is so instructed.

## **Environmental Requirements**

Operating	Ambient Temperature	$41^{\circ}\text{F} \sim 104^{\circ}\text{F}$ (5	$6^{\circ}C \sim 40^{\circ}C$
Operating	1 molent lemperature	11 1 10 1 1 (2	$^{\prime}$

Humidity  $30\% \sim 75\%$ 

Atmospherical Pressure 10.2psi ~ 15.4psi (700hpa ~ 1060hpa)

Storage Ambient Temperature  $14^{\circ}F \sim 122^{\circ}F \ (-10^{\circ}C \sim 50^{\circ}C)$ 

Humidity  $10\% \sim 80\%$ 

Atmospherical Pressure 8.7psi ~ 15.4psi (600hpa ~ 1060hpa)

#### Classification

- a. Protection against electric shock : Class I Equipment, Type B Applied Parts **(**Headrest, Backrese and Seat cushions)
- b. Protection against water ingress: Chair (IPX0)
- c. Equipment not suitable for use in the presence of a flammable anesthetic mixture with air or with oxygen or nitrous oxide.
- d. Mode of operation: Non-continuous operation. ON time: 3min. OFF time: 15 min

## **Symbol**



Applied part complying with the specified requirements of IEC60601-1:2005 to provide protection against electrical shock, particularly regarding allowable patient leakage current and patient auxiliary current.



Caution, warning or note

# **ACAUTION**


- This chair is intended to be used for dental examination and treatment. Do not use this for any other purpose than examination or treatment.
- Only a trained and qualified personnel should operate this chair.
- Follow all the safety precautions and instructionsions to protect patients and operators.
- During treatment keep small children, except for a patient, away from the treatment area.
- Always keep an eye on the patient so he/she shall not touch the equipment.
- Keep patient's and operator's hands, fi ngers or parts of the body away from moving parts of the equipment.
- In the case of defect, put a proper label on it. Call a technician of our authorized dealer.
- This product may be affected by sources that generate excessive electromagnetic waves.
- Do not install this equipment close to such devices such as elevators or communication equipment, including cellular telephones.
- Electrosurgical knives may cause the chair to temporarily malfunction. If an electrosurgical knife is to be used, turn off the main switch of the chair after the patient has been positioned.
- Take extreme care with patients that have a pacemaker. Prior to operation of the chair, ask patient to verify whether they have a pacemaker. When operating chair, be certain patient displays no indication of discomfort. Cease chair operation immediately and turn off main power switch if patient shows any sign of being affected by chair operation.
- Do not position this equipment so that it is difficult to access the main power supply outlet that the power plug of this chair is connected to.

# **ACAUTION**

The followings are prohibited.

- To modify this equipment.
- To use the equipment under any failure condition.
- To use the equipment without doing the daily and periodical check-up.
- To wipe the plastic covers with any disinfectant or detergent that contains organic solvent.
- To let a person on the chair who weighs over 300 lbs.
- To let two or more person on the chair.

## 1. OVERALL VIEW AND MAJOR COMPONENTS

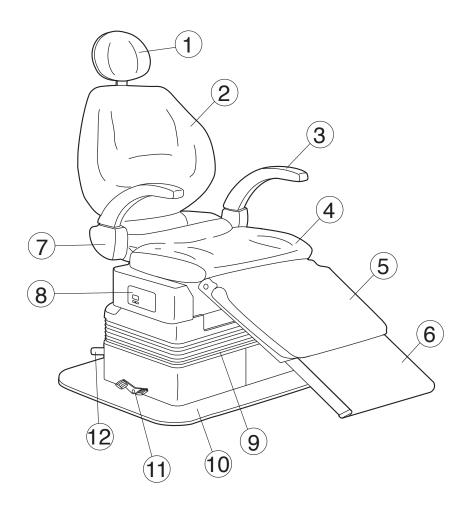


- (1) ARTICULATING HEADREST
- (2) BACKREST
- (3) ARMREST
- (4) SEAT
- (5) LEGREST
- (6) RETRACTABLE FOOTREST

- (7) ARMREST BLOCK
- (8) CHAIR PRESET PANEL
- (9) BELLOWS
- (10) BASE PLATE
- (11) ROTATION LOCK PEDAL
- (12) FOOT SWITCH (CHAIR)

Fig. 1-1 OVERALL VIEW

## 2. DIMENSIONS AND SPECIFICATIONS

## 2-1. Dimensions

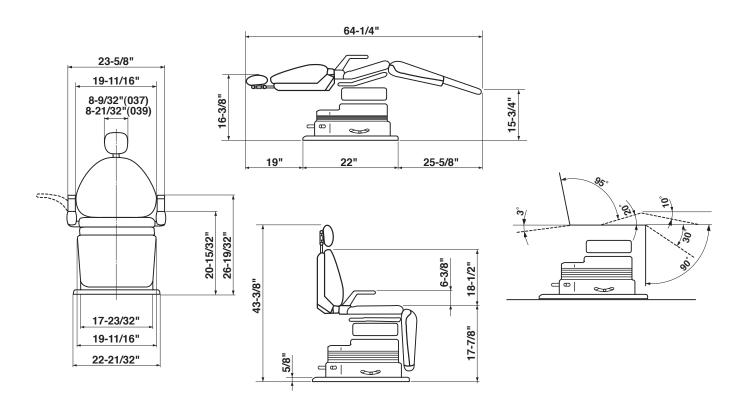

# 2-2. Specifications

CHAIR WEIGHT	330 lbs
BASE DIMENSION	22" x 22-5/8" x 5/8"
INITIAL HEIGHT	17-7/8"
SEAT ELEVATION STROKE	10-1/4"
LEGREST EXTENSION	9-1/16"
ROTATION	220 Degree Total (110 Degree. Left & Right)
MOTOR PUMP	Type 5LP
PUMPING CAPACITY	0.72 L/min. (0.19 gal/min)
HYDRAULIC FLUID	900 cc (30 fl.oz)10W Non Detergent Hydraulic Oil
POWER REQUIRED	- 115V 50 / 60Hz 5.7 / 3.6 A

#### 3. ELECTRICAL DIAGGRAM S13 IL-2P-S3EN2 (JAE) 00000 Right Backrest P Backrest Reclining A Raising Pump Section Seat Section S4-B(4-A) IL-4P-S3EN2 (JAE) 0030 0000000000 Left Backrest Operation Application Properties Proper Stick Switch S2-B(2-A) IL-6P-S3EN2 (JAE) CN12 IL-3P-S3EN2 (JAE) S2-A(2-B) IL-6P-S3EN2 (JAE) du Cowonio Med Co 1G01AG\*\* Motor Section (120V) Brown Motor 0000000 S3-A(3-B) IL-6P-S3EN2 (JAE) 0000000 S3-B(3-A) IL-6P-S3EN2 (JAE) X-60080 larness(A-6)PRO-A Trunk Line for Main PCB. Power Source S9 IL-2P-S3EN2 (JAE) 女 LED1(Green) ≰ LED2(Green) 本 LED3(Red) | 150040\*\* | Transformer Section(120V) | Trunk Line for Relay | PCB/Transformer 2 Trunk Line for Motor/Capacitor S15 3P-SCN -Z-120V 00000 S12 IL-4P-S3EN2 (JAE) CN1 CYCIOW B2P-VH CYCIOW NOL & & & LIM CNS B04P-NV CN8 B03B-XASK-1N-A S8 IL-12P-S3EN2 (JAE) CN3 B3P-VH 00000 S14 IL-4P-S3EN2 (JAE) Ognisie S11 IL-3P-S3EN2 (JAE) Relay PCB.(9RY)RY-2005 Control PCB.(MCX2) Modow (AGDJ55\*\*) TED1 rene `\ 本 69 \* 6gn S10 IL-10P-S3EN2 (JAE) LED2 LED4 LED10 LED3 LED5 LED8 (MOLEX) (MOLEX) (MOLEX) (MOLEX) (MOLEQUE CN8 CN4 B02P-NV S5 IL-3P-S3EN2 (JAE) S7 IL-3P-S3EN2 (JAE) Potentiometer for Backrest [7] Brown 56 Red 7 | Red 7 | Last Orange 5 | Last Orange 5 | Last Orange 5 | Last Carage 5 | Last 1G01AJ\*\* Relay BOX Section(037) Potentiometer for Legrest Potentiometer for Seat Lifting ⊡ Yellow Sellow Se Black dot indicates male pin side Trunk Line B for Solenoid Valve ANET 12\*\* Plug Potentiometer for Seat Lifting EWS UOA S25 E33 (280°5K?) Potentiometer for Backrest Potentiometer for Legrest EWS UOA S25 E33 Solenoid Valve Block(120V) Raising Reclining Raising Lowering d M···Commercial Connector(AMP) m···Mini Universal Connector(AMP) NMF···New Mini Fit Connector(molex) Backrest Legrest Connector Symbol Seat Pump Section Seat Section VL···VL Connector

#### 4. INSTALLATION PROCEDURES

- 1) Place chair crate just behind the planned location for the chair.
- 2) Open the crate and remove all packing materials.

(Do not use sharp instrument that can damage upholstery.)

Slide the chair off palette into the place.

## DO NOT LIFT THE CHAIR BY ARMRESTS OR BACKREST.

- 3) Once the chair is located, but BEFORE PLUGGING INTO POWER, do the followings;
  - (1) Remove red bolt with a caution tag located on chair seat-plate.
  - (2) Grasping red tag on bellows, pull out rubber plug of oil reservoir.
  - (3) Save above red bolt and rubber plug in case the chair is ever reshipped in the future.
- 4) Remove 3 nuts and washers under the seat.

Attach the seat on seat-plate and fix it by screwing the nuts and washers from underneath the seat-plate.

- 5) Attach bellows to bellows support.
  - (1) Loosen and remove 4 Phillips screws on bellows support-rear, then remove the bellows support-rear from the chair.
  - (2) Hang the top plate of bellows on the edge of bellows support-front, and hang the top-rear plate of bellows on the edge of bellows support-rear.
  - (3) Reattach bellows support-rear with hanging bellows on to the chair by screwing 4 Phillips screws.
- 6) Unpack the small carton containing accessories. Check following items in it.

Flat Head Wood Screw (Pie.4.8 - 40) .......... 4 pcs.

For an 037N chair, slide headrest into slide mount on top of backrest.

#### 7) Fixing the chair on the floor

Fix the chair base on the floor with bolts.

Chair base fixing points are shown in figure 3-1.

In case of wood floor, fix the chair base

with attached flat head wood screws.

In case of concrete floor, fix the chair base

with attached anchor plug and flat head wood screws.

# **CAUTION**

Chair must be fixed to the floor with bolts to prevent from falling down.

When fixing chair to the floor, be careful not to damage pipings under the floor.

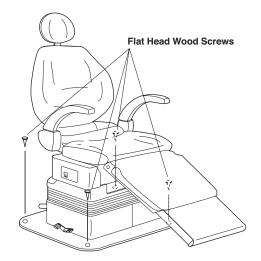


Fig. 4-1 Fixing chair on the floor

## AFTER INSTALLATION

Once the chair is installed according to above steps, check the all chair function following the operation procedures in this booklet.

#### 5. OPERATION PROCEDURES

# **ACAUTION**

To avoid the risk of electrick shock, this equipment must pnly be connected ato a supply mains with protective earth. Grounding reliability can only archieved when the equipment is connected to a equivalent receptacle marked HOSPITAL ONLY or HOSPITAL GRADE.

The Belmont 037N chair was designed for maximum simplicity of operation. However, taking a few moments to familiarise yourself with the operation of the chair will make it's operation comfortable and simple for you and your patients.

#### 5-1. Main Power Switch

- 1) Plug the chair into an appropriate electric power source.
- 2) Turn on the Main Switch located on left side of Pump Cover. (See Fig. 4-1.)

# **ACAUTION**

Operate the Main Power Switch by hand only. Turn off the main switch after daily operation. Do not touch any switch with a wet hand, as it might cause electric shork.

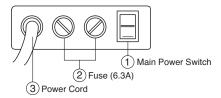


Fig. 5-1 Main Power Switch

# **ACAUTION**

#### Before use

- Check connection of swtiches and make sure that the device functions properly.
- Make sure that grounding wire is connected.
- Make sure that cables are properly and perfectly connected.
- Be careful when you use the equipment combined with another, as it may lead to inadequate decision or danger.

#### **Patient Entry**

- Do not operate the chair until patient is fully seated. Patient head, back and feet must be in full contact with seat cushions. Patient hands must be placed on top of forward facing armrests or on their lap. All patients are at risk of potential injury if these precautions are not followed.
- Do not allow patient to sit on the hearest, armrest or on the backrest. Do not give too much load on the chair cushions. Failure to do so might lead to malfunction or an accident, such as fall from the chair or break of the device

## **During use**

- Do not use the chair longer than required for examination or treatment.
- Always watch the patient and the equipment to make sure nothing is wrong.
- If anything wrong is observed with the equipment or the patient, take a proper action, such as stopping the use of equipment as well as keeping the patient in safe.
- Keep an eye on the patient not to touch the equipment.
- Do not touch the patient and the fuse holder simultaneously.

#### After use

- Turn off the swtich and pull of the power supply plug.
- Clean the equipment and get it ready for use.

#### 5-2. Controls

## **Basic Control Function (FIG.5-2)**

- Chair manual control functions are duplicated on both sides of the pump cover.
- Chair auto control functions are equipped on rear side of the pump cover.
- Chair rotation function are equipped on right side of the pump cover.

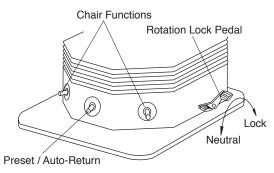


Fig. 5-2 Control Switch Location

## 1) Chair Manual Controls (See Fig. 5-3.)

(1) Seat Height Control

To raise: Move either side mounted foot switch up.
To lower: Move either side mounted foot switch down.

(2) Backrest Control

To raise : Move either side mounted switch right. To reclining : Move either side mounted switch left.

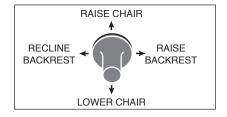


Fig. 5-3 Chair Manual Control

## 2) Chair Auto-mode Controls (See Fig. 5-4.)

(1) Preset Mode Controls(1.2.3)

037N chair has two preset positions and last position memory. To place the chair in each position with footrest extension. Momentarily move the foot switch located on rear side of the pump cover.

1 (Preset 1) : Move rear mounted switch right. 2 (Preset 2) : Move rear mounted switch left. 3 (LP) : Move rear mounted switch up.

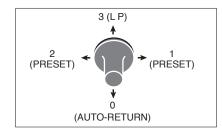


Fig. 5-4 Chair Auto-mode Control

#### (2) Auto-return Control (0)

To return the chair to the patient entry position (fully lowered with the footrest retracted), Momentarily move rear mounted foot switch down.

## 3) Chair Rotation (See Fig.5-5)

Release rotation lock by pressing "N" footpad and lock chair in desired position by pressing "L" footpad.

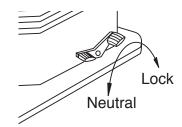


Fig. 5-5 Rotation Lock Pedal

## 5-3. Headrest Adjustment (See Fig. 5-6)

(1) Height Adjustment

Press down or pull up the headrest for height adjustment.

(2) Angle Adjustment

Grab the headrest release lever on headrest mechanism and move to desired position.

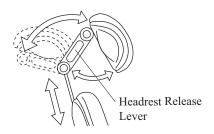


Fig. 5-6 Headrest Adjustment

# **ACAUTION**

Take care not to pintch the fingers with the headrest mechanism.

## 5-4. Positioning of Headrest (See Fig. 5-7)

- (1) Seat patient upright and all of the way back on the chair.
- (2) Position the bottom of the headrest cushion so it is even with the occipital of the patient's head.

## Viewing the lower arch (See Fig. 5-7)

- (1) Using the latch release button (white), pivot the headrest cushion halfway toward the patient's head.
- (2) Have the patient lean back on the headrest.
- (3) Using the chair controls, place the patient in the desired operating position.

## Viewing the upper arch (See Fig. 5-7)

- (1) Lower the backrest and raise the base of the chair.
- (2) Slide the headrest in.
- (3) Support the patients head/headrest cushion while pressing latch release button.
- (4) Tilt the headrest cushion until the desired upper arch position is obtained.

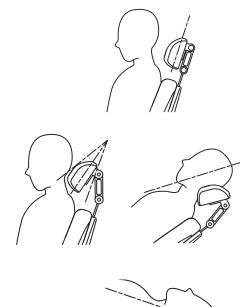


Fig. 5-7 Positioning of Headrest

## 5-5. Armrest Rotation (See Fig. 5-8)

Either armrest can be rotated outward by pulling.

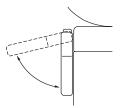


Fig. 5-8 Armrest Rotation

#### 5-6. Safety Stop

Automatic travel in all automatic mode can be instantly cancelled at any time by momentarily pressing any control switch.

## 6. ADJUSTMENT OF POSITIONING

## 6-1. Auto Return (AR), Preset (1.2), and Rinsing Position (LP) Setup (Fig.6-1)

There are two different setup procedures but the results are the same.

## 1) Setup Procedure 1.

- (1) Move the chair to desired position by manual control switches.(Fig.6-1)(Also, move the legrest to the desires extension or
  - retraction limit position)
- (2) Move the stick switch (0 or 1 or 2 or 3) for that position until the beeper sounds (about 5 seconds) to complete the procedure.(Fig.6-2)

0: Auto return

1: Preset-1

2: Preset-2

3: (LP) Rinsing position as the last position

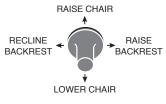


Fig. 6-1 Stick switch (Manual)

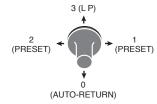


Fig. 6-2 Stick switch (Auto-mode)

## 2) Setup Procedure 2.

- (1) Move the chair to desired position by manual control switches.(Fig.6-1)(Also, move the legrest to the desires extension or retraction limit position)
- (2) Press and hold down the "Store" SW (about 2 seconds)(Fig.6-3).After the initial beeper sound, the beeper keeps on sounding once at the "pip, pip" (ten times at one second intervals).
- (3) Press the stick SW (1 or 2 or 3) for that position to complete the procedure. (Fig. 6-4)
  If the step 3 does not take place within 10 seconds, the procedure is terminated.
  (Setup of the Auto return position is not available.)
- (4) To exit the procedure during the step 2, press the "Store" SW once again.

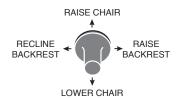


Fig. 6-1 Stick switch (Manual)

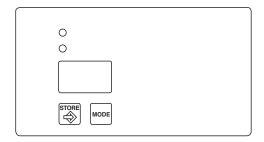


Fig.6-3 Chair Preset Panel

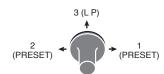


Fig. 6-4 Stick switch (Auto-mode)

#### 7. CARE AND MAINTENANCE

## 7-1. Cleaning and disinfection

# **ACAUTION**

Do not spray liquids directly onto chair surfaces.

In order to prevent damage to electrical components and systems, do not apply excess cleaning solution onto chair surfaces.

#### **Routine Care**

Clean plastic and upholstery surfaces iegularly using a mild soap and water solution.

When cleaning, use a dampened cloth only, as excess cleaning solution can flow into the chair and cause permanent damage to electrical components.

#### **Barrier Technique**

Use of disposable barrier products should be the first choice for the protection of dental equipment. Disinfectants leave behind a surface residue that accumulates over time and eventually damages equipment and upholstery surfaces.

#### **Chemical Disinfection**

If a chemical disinfectant is to be used on chair or upholstery surfaces, contact the manufacturer of the disinfectant prior to use.

Obtain verification from the disinfectant manufacturer that their product will not damage the chair or upholstery surfaces.

## **Unacceptable Disinfectants**

The following chemicals may damage equipment and upholstery:

- \* Alcohol based solutions
- \* Bleach
- \* Phenol / Alcohol combinations
- \* Foam spray products
- \* Benzalconium chloride solutions

#### **Use with Caution**

\* Water based phenolic disinfectants, following manufacturer's exact instructions for use.

# **ACAUTION**

Warranty does not cover damage to equipment and upholstery caused by disinfectant solutions.

## 7-2 Storage and working lifetime

## 7-2-1 Storage

- 1. Keep the equipment away from water.
- 2. Keep in a circumstances safe from influence by temparature, humidity, wind, sun light, air containig salts and minerals.
- 3. Care about stability such as inclination, vibration and impact, including handling and transportation.
- 4. Do not keep the equipment in a place where chemicals are or where gas is emitted.

## 7-2-2 Lifetime

Provided that the recommended and authorized care and maintenance are correctly performed, the working lifetime of this equipment is 10 years from the date of initial shipment from the manufacturer.

## 7-3. Daily Check-up of functions by the end user

The end-user is responsible for daily check-up of the equipment. In the case end user does not do this, it is allowed that you outsource it to a technician authorized by us.

In order to assure safety use of this equipment, please carry out the following check-up in a frequency as indicated below.

No.	Item (Frequency)	How to check and diagnose	Influence of not doing check-up	Actions when any incompliance is found
1	Safety functions (Daily. Before opening office)	During pre-set movement or auto-return movement, press any key for chair operationnand the chair should automatically stop.	Injury caused by movement of the chair during treatment or pinching with chair and other equipment or furniture.	Call to a technician of our authorized dealer.
2	Function of each switch (Daily. Before opening office)	Each switch for chair operation should work correctly.	Defect of movement may cause an accident.	Call to a technician of our authorized dealer.
3	Wiping off water (Daily. Before closing office)	Make sure that no water is left that were spilt during treatment.	Water will caus rust	Wipe off water with a soft and dry cloth.
4	Stain removal of external parts (Daily. Before closing office)	Visually make sure that no dust, chemical or other material is left on the chair.	Such chemicals will cause discoloration, deterioration and break of the plastics.	Thoroughly clean the chair following the cleaning instruction in this book, regardless the result of this check-up. For tough stains, use mild detergent solvency.
5	Main power switch (Daily. Before closing office)	Make sure that the main power switch is off	Accident or defect of the equipment	In the case the main power cannot be turned off, Call to a technician of our authorized dealer.
6	Moving parts (Weekly)	Make sure that the chair does not make any abnormal noise during automatic movement	Accidend or defect of the equipment	Call to a technician of our authorized dealer.
7	Oil leakage (Weekly)	Make sure that there is no hydraulic oil on the floor or chair base leaking from the cylinder.	Defect of the equipment	Call to a technician of our authorized dealer.
8	Power supply cable (Monthly)	Power supply cable should not be abnormally bent, pintched or damaged, and the plug should be firmly inserted to the power outlet and not covered with dust.	Accident or defect of the equipment	Clean and rearrange the cable. For replacement, call to a technician of our authorized dealer.

## 7-4. Guideline for Periodical Check-up

- Some parts and components of the products are degraded or deteriorated depending on the frequency of use, so yearly check-up and maintenance, as well as replacement of comsumable parts, are required.
- For check-up and repair, call a technician of our authorized dealer.

## Parts and components that require periodical check-up

No.	Parts Description	Standard Lifetime
1	Headrest Mechanism	2 years
2	Electric wiring of moving parts	2 years
3	Swithes for operating equipment	2 years
4	Transformer	3 years
5	Control PCBs	3 years
6	Hydraulic cylinder and related parts	5 years

## **Consumables**

No.	Parts Description
1	Power supply cord
2	Cusions and Upholsteries

## 7-5 Disposal

- This is not an infecious device, but prior to disposal make sure that no parts of the device is infected.
- Follow the federal, state and local regulations for disposal.

# NOTE

This equipment should installed by an professional technician(s) of our company or a company authorized by us. Follow the installation manual enclosed with this manual for details of installation.

ompany or person authorized to ins	tall this equipment	
ame:		
ddress:		



## BELMONT EQUIPMENT, Division of Takara Belmont, USA, Inc.

101 Belmont Drive Somerset, New Jersey 08873 U.S.A. TEL.:(732) 469-5000 / (800) 223-1192 Fax.:(732)526-6322 / (800) 280-7504 www.belmontequip.com

## TAKARA CO, CANADA LTD.

2076 S. Sheridan Way, Mississauga, Ont., L5J2M4, Can. TEL.:(905) 822-2755 Fax.:(905)822-6203 www.takarabelmont.ca



TAKARA BELMONT CORPORATION (Manufacturer)